


1

Please activate all the TPMS sensors to get the IDs (picture 1) before performing any TPMS relearning.

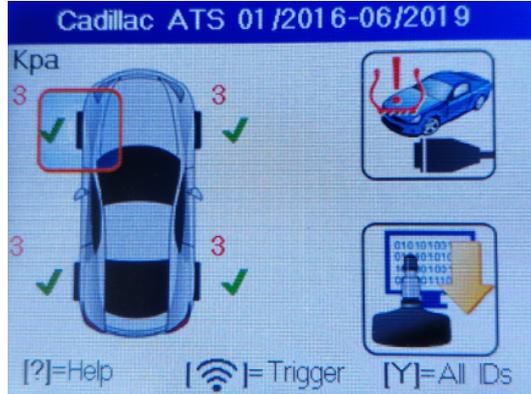


Picture 1


2

Connect TS601 to the vehicle's DLC, select the diagnostic icon (picture 2), then choose "Read IDs from Vehicle" (picture 3) from the "TPMS Diagnose" interface.

Note:The sensor data from step 1 and step 2 will be recorded separately in columns ID Hex/ID Dec and BCM ID Hex/BCM ID Dec (picture 5). You can re-execute step 2 to refresh the record in columns BCM ID Hex/BCM ID Dec if the IDs in BCM are changed.

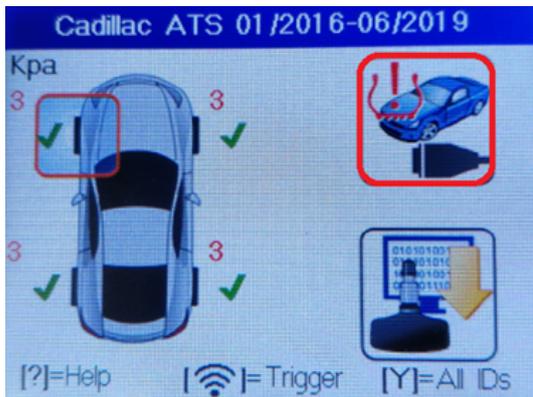

Picture 2

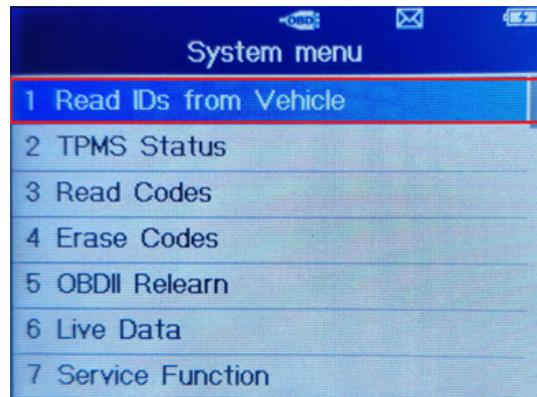


Picture 3

3

Go back to the main interface (picture 4), then connect TS601 to the computer via a USB cable (with OBD cable off). Find the disk of "AUTEL" on the computer and open the "RECORD.HTM" file to view the test record (picture 5). Then you can print or save the record.



Picture 4

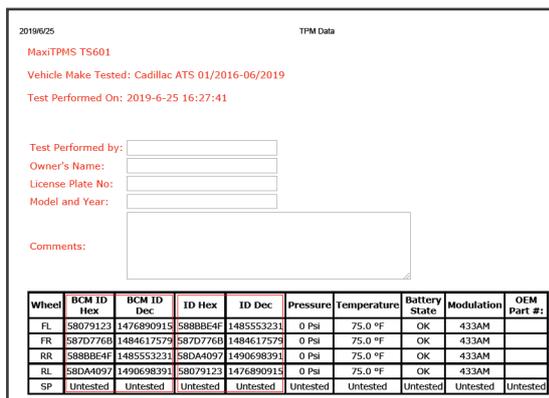

Picture 5